

Electronic Measuring Instrument





CE

CE certified low-resistance measurement compliant with major safety standards

Protective ground tester indispensable for standard certification



The **3157-01 AC GROUNDING HITESTER** is designed to measure whether the metal enclosure of an electrical equipment is connected to the ground terminal at sufficiently low resistance levels. It also can be used to evaluate the grounding conditions of large-scale electrical installations. Measurement is carried out by using a high current according to the specifications of the measurement object, and determining the voltage drop at the measurement point. Reference values are as set out in the various safety standards. The **3157-01** can carry out measurements in accordance with the stipulations of multiple standards.



Low-resistance measurements in accordance with all major safety standards



Main applications

The **3157-01** passes a large AC current through the measurement object and measures the voltage drop according to the AC 4-terminal method, making it possible to measure very low resistance values.

- Protective grounding checks of medical and general electrical equipment
- Ground connection tracing of machine tools and wiring panels
- Safeguard and equal-potential connection checks of medical installations
- High-current behavior evaluation of connections

Major features

Compliant with a multitude of standards

The **3157-01** allows measurement as prescribed by most major safety standards. Using the 4-terminal method to measure the voltage drop for a high current, the unit offers evaluation features and a timer function to allow efficient standard compliance testing.

Constant-current testing (max. 31.0 A) with feedback control

The output current is controlled by a feedback loop to achieve stability, regardless of fluctuations in the load impedance.

Test data count function

For installations with many test points, the unit can automatically count the number of tests, to ensure that no points are missed.

Setting value store function

Up to 20 settings can be stored, allowing quick switching between the various setups for different standards and legal requirements.

"SOFT START" function

The unit checks whether the probe is connected to the measurement object, and raises the output current to the preset value when a connection is detected. This serves to prevent sparks caused by connecting a live probe to a measurement object, thereby guarding against equipment damage and ensuring operator safety.

Fluorescent tube display (VFD)

The display uses an easy to read fluorescent tube. Compared to conventional meters, the digital indication allows effortless reading of the data.

Light weight and compact dimensions

Whereas conventional testing equipment required a trolley for transport, the 3157-01 can be easily carried with one hand. Its small dimensions, light weight, and ease of maintenance make it ideal for use in the field.

 $[320 (W) \times 90 (H) \times 263 (D) mm \\ 12.6" (W) \times 3.56" (H) \times 10.40" (D) \\ 7 kg(247.2 oz)]$

Standards supported by the 3157-01

●IEC60065

[Safety requirements for mains operated electronic and related apparatus for household and similar general use]

●IEC60204-1

[Electrical equipment of industrial machines -Part1,General requirements]

●IEC60335-1

[Safety of household and similar electrical appliances - Part 1, General requirements]

●IEC60601-1

[Medical electrical equipment -Part 1, General requirements for safety]

●IEC60950

[Safety of data processing equipment, including office equipment]

●IEC61010-1


[Safety requirements for measurement, control, and laboratory electrical equipment]

OL standard

Relevant standards

(UL 1012, UL 1270, UL 1409, UL 1419, UL 1437, UL 2601, etc.)

A multitude of functions in a compact body

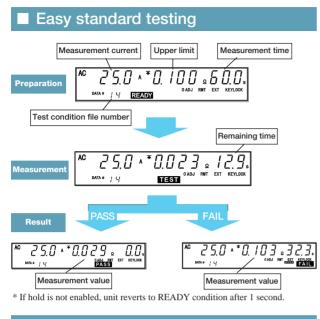

Versatile functions

(4) 6 7 8 (ft 1 (Pressing SHIFT + STOP keys allows the user to make settings for each function.)

① Output current frequency switching (0: 50 Hz / 1: 60 Hz)

2 PASS/FAIL hold function setting

Determines whether the condition is held after detecting PASS or FAIL.

	0	1	2	3
PASS	NO	YES	NO	YES
FAIL	YES	YES	NO	NO

③ Hold function setting (0: Hold disabled / 1: Hold enabled) Holds the condition of the unit after the preset test time has elapsed or after the STOP key is pressed.

④ Use test lower limit setting (0: No / 1: Yes)

Disabling the setting allows only the upper limit to be set. Enabling the setting allows also the lower limit to be set.

5 Timer override (0: No / 1: Yes)

Determines whether a test time can be set. If test time is not set, the test ends only when the STOP key is pressed or the result is FAIL.


External I/O

The unit comes with I/O connectors as standard equipment. The connectors allow external START/STOP control, READY/TEST status checking, and PASS/FAIL result reading. Photocouplers are used to isolate the I/O signals from the internal circuitry.

External interface (option)

The 9518-02 GP-IB interface or 9593-02 RS-232C interface can be installed in the unit. This allows remote control from a computer as well as export of measurement data. The 9593-02 RS-232C interface also allows connection of the 9442 printer for producing a hard copy of measurement data.

Measurement range

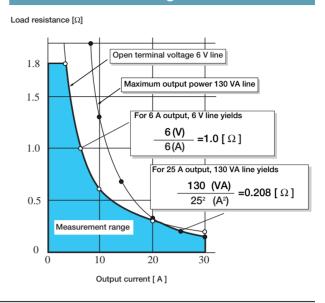

- 6 Test data count function (0: Disable/1: Enable) Allows counting of test points for equipment with many test points.
- ⑦ Buzzer setting 0 1 2 3 Evaluation ON OFF OFF ON Error ON OFF ON OFF
- ⑧ Enable current control in test condition (0: No/1: Yes) Allows changing of the output current value while a test is in progress.

9 Momentary out

Enabling this function allows the current to be output only when the START key is pressed.

- 0: Disabled (trigger operation) 1: Enabled (momentary out operation)
- 10 Test mode
 - 0: Soft start mode
 - 1: Normal mode
 - 2: Continuous test mode

1 Print function

- 0: Not used
- 1: Automatically print PASS/FAIL result
- 2: Optionally print in PASS/FAIL hold condition



Printing method : Thermal serial dot printer Р

rintina	sneed	: 52.5 cps

Р

- : 9443 AC adapter, or supplied nickel-hydride battery (Charged through 9443; printing capability approx. 3000 lines with Power source full charge)
- * To use the 9442 printer, an optional 9593-02 RS-232C interface, 9446 connection cable, and AC adapter are required.

3157-01 Specifications

Basic specifications -

Basic functions : AC 4-terminal method resistance measurement

[Generator section]

Current generator principle	: PWM constant current control
Current setting	: 3.0 A - 31.0 A AC (0.1 A resolution), into 0.1W load
range	
Accuracy	: \pm (1% of setting + 0.2 A) within maximum output power range
Maximum output	: 130 VA (at output terminals) *
power	* Subject to derating according to ambient temperature [80% at 40°C (104°F)]
Open-terminal	: Max. 6 V AC
voltage	
Generator	: 50 Hz or 60 Hz sine wave (selectable)
frequency	
SOFT START	: Apply current only after checking load connection
function	11, , , , , , , , , , , , , , , , , , ,

[Monitor section]

Resistance	: 0 - 1.800W (0.001W resolution)
measurement	
range	
Accuracy	: \pm (2% rdg. +4 dgt.) after zero-adjust
Current monitoring	: 0 - 35.0 A AC (0.1 A resolution)
range	
Accuracy	: \pm (1% rdg. +5 dgt.) (at 3 A or more)

General Specifications –

[Timer section]

[Other functions]

9518-02 GP-IB INTERFACE

9442 PRINTER

9593-02 RS-232C INTERFACE

1196 RECORDING PAPER(25m, 10 rolls) 9443-02 AC ADAPTER(for printer, EU) 9443-03 AC ADAPTER(for printer, America)

9446 CONNECTION CABLE(for printer)

Comparator	: PASS/FAIL evaluation using preset upper/lower limit
function	
Comparator result	: Internal buzzer (PASS/FAIL, ON/OFF switchable) and
output	I/O output
Zero-adjust	: For measurement probe impedance cancellation
function	
Zero-adjust range	: 0 - 0.100W
Memory function	: Max. 20 settings (with save/load)
•	Ĕ,

Gonoral	opeenieuterie		
Display	: Fluorescent tube (digital display)	Interfaces	: 1. External I/O *
Ambient conditions	: 0 to +40°C (32 to 104°F), 30 to 90% RH (no condensation)		Output signals: PASS /UP FAIL /LOW FAIL /TEST
for use			/READY open collector
Ambient conditions	: -10 to +50°C (14 to 122°F), 10 to 95% RH (no condensation)		Input signals: START /STOP /External I/O
for storage			ENABLE 5 - 24 V DC
Ambient conditions	$: 23^{\circ}C \pm 5^{\circ}C (71.3^{\circ}F \pm 9^{\circ}F)$		2. Front EXT connector *
for assured	30 to 90% RH (no condensation)		External START/STOP input contact signal
accuracy	After 30-minute warmup period		* When external start/stop connector is used, START key is inactive
Suitable	: Indoors, altitude up to 2000 m		3. RS-232C or GP-IB (option; one only)
environments			Remote control, measurement data output
Power supply	: 100 - 120 V/200 - 240 V AC (auto-switching)		(When RMT indicator is on, operation keys are locked; only LOCAL,
voltage range			STOP, and external keys work)
Power line frequency	: 50 - 60 Hz	Dimensions	: Approx. 320 (W) × 90 (H) × 263 (D)mm
Withstand voltage	: 1.35 kV AC, 20 mA, 1 min., between power supply and chassis		Approx. 12.6" (W) × 3.56" (H) × 10.40" (D)
Maximum rated	: 350 VA (with optional equipment)		(Without protruding parts)
power		Mass	: Approx. 7 kg/247.2 oz (without options)
Fuse	: 250VT3. 15AL	Standard	: Power cord, spare fuse (integrated in inlet),
Compatible	: 1. EMC : EN55011:1991+A1:1997+A2:1996	accessories	shorting bar $\times 2$ (current output - voltage sensing terminal)
standards	Group1 CLASS A		
	EN50082-1:1992		
	2. Safety : EN61010-1:1993+A1:1995		
	Contamination 2 Overvoltage category II		

3157-01 AC GROUNDING HITESTER

*For measurement, two 9296 or one each of 9296 and 9297 are required.

Options

9296 CURRENT PROBE 9297 CURRENT APPLY PROBE



* 9296/9297 use dual wiring up to the probe tip.

(expected overvoltage category 2500 V)



DISTRIBUTED BY

HIOKI E. E. CORPORATION

HEAD OFFICE :

81 Koizumi, Ueda, Nagano, 386-1192, Japan TEL +81-268-28-0562 / FAX +81-268-28-0568 E-mail: os-com@hioki.co.jp

HIOKI USA CORPORATION : 6 Corporate Drive, Cranbury, NJ 08512 USA TEL +1-609-409-9109 / FAX +1-609-409-9108 E-mail: hioki@hiokiusa.com